


ENGINE COMPARTMENT

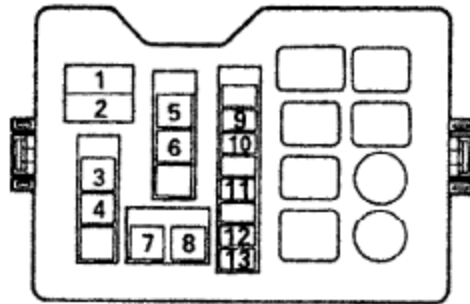

Fusible Links


- 1 - 60A Battery
- 2 - 100A Alternator
- 3 - 20A Multi-point injection
- 4 - 40A Ignition switch
- 5 - 30A Rear window defogger
- 6 - 30A Power window control
- 7 - 30A (Air conditioner)
- 8 - 40A Lights

Fuses

- 9 - 10A (Aircon compressor)
 - 10 - 25A Condenser fan
 - 11 - 10A Tail lights
 - 12 - 10A Headlight upper beam
 - 13 - 10A Hazard warning flashers
- (): indicates optional equipment

50J12897

Fig. 4: Engine Compartment Fusible Links
Courtesy of Mitsubishi Motor Sales of America.

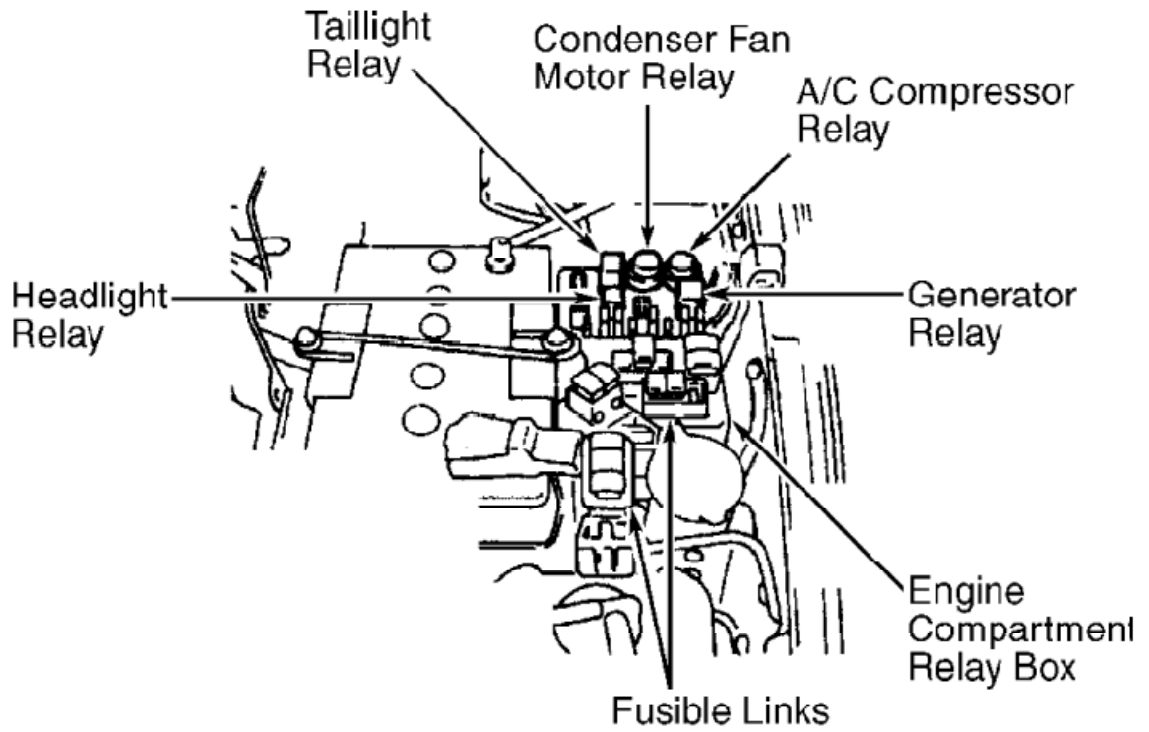

98B02349
A/C Compressor Relay

In engine compartment
relay box.